




# Replacing the BIOS battery

Written By: Felice Suglia



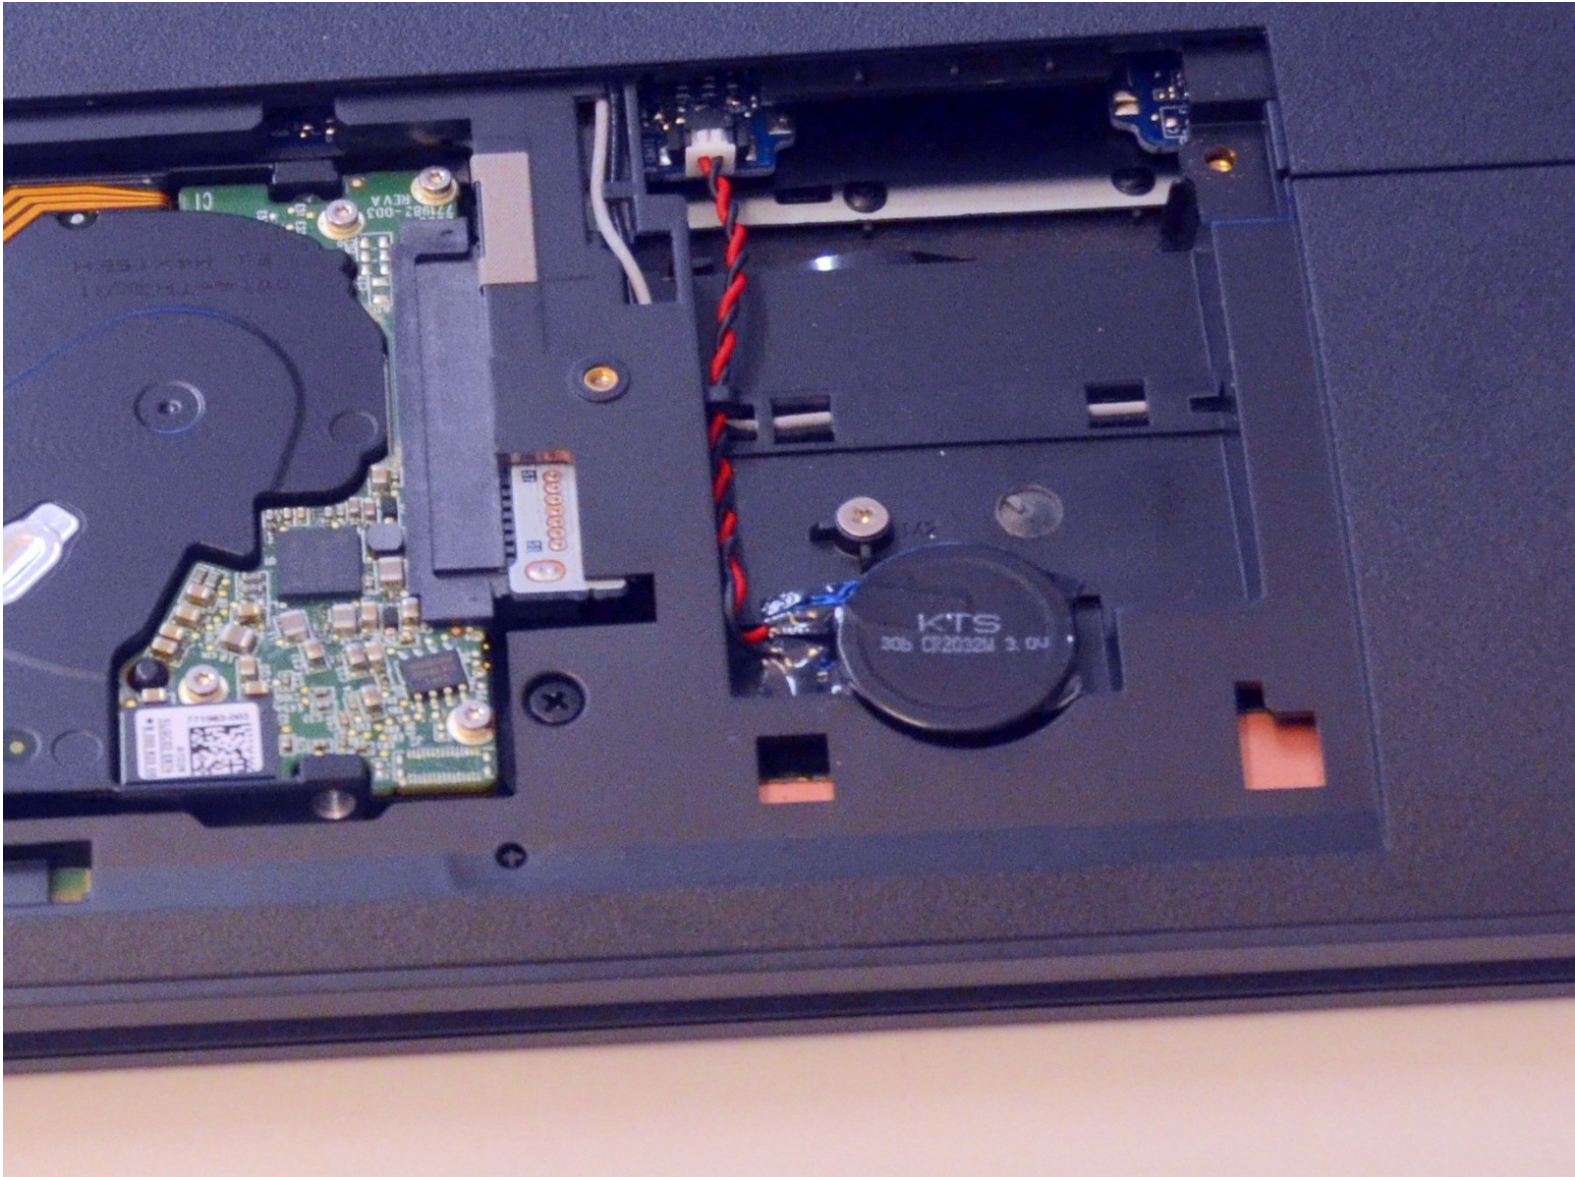

## TOOLS:


- [Phillips 0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Unlock the latch for fixing the battery to the right.
- Unlock the fixing bolt from the battery to the left.
- Remove the battery pack from the slot.

## Step 2 — Access Components 1

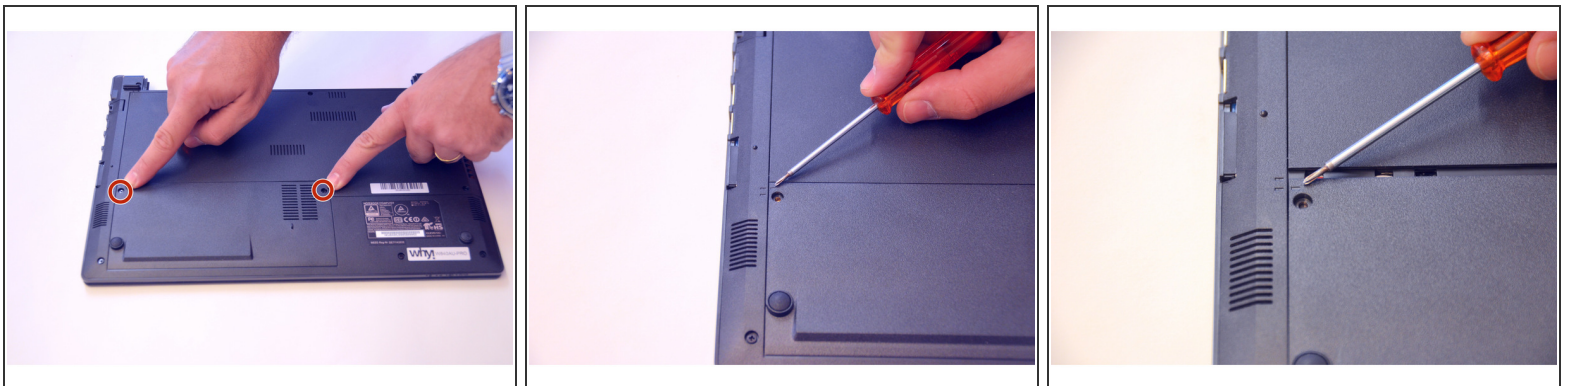

- Using the Philips screwdriver # 0, unscrew the 2 screws from lower cover.
- Check marks indicating the direction in which to remove the cover.
- Remove the bottom cover by pulling it in the direction markers.





### Step 3



- The hard disk HDD and BIOS battery components then appear.

### Step 4 — Pile Bios

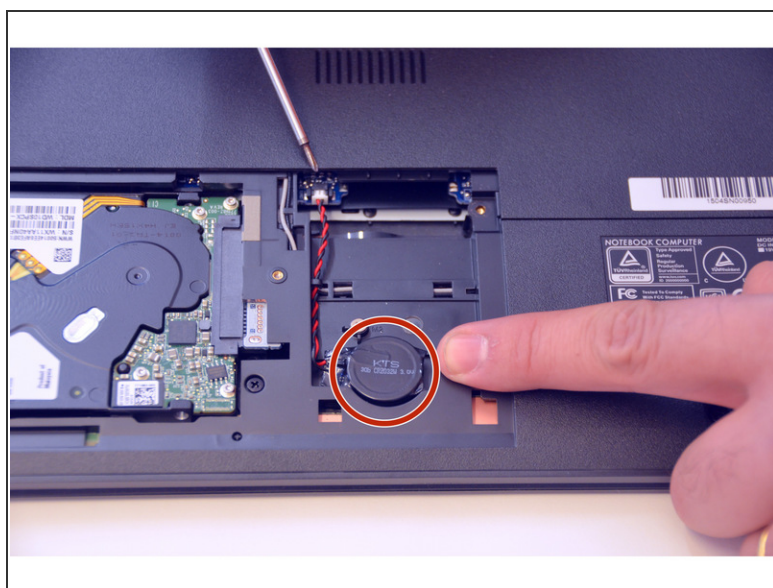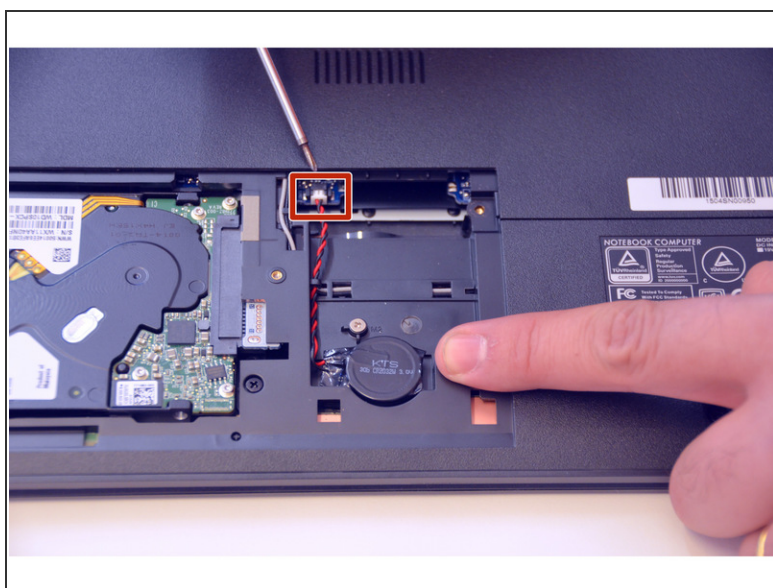

- Remove to begin the battery connector.
- Then gently peel the BIOS battery itself.

Pour le remontage, suivre les instructions dans l'ordre inverse.

